

HRC® 551 Series
45M (#14) Anchor T-Heads

Installation Procedure

CSA G30.18

SAFETY FIRST! In all cases, follow jobsite safety plans, and consider your own personal safety. Make sure you are wearing PPE, and are securely positioned so that you will not slip or fall during installation.

This procedure is for the installation of assembled HRC 551 Anchor T-Heads and steel reinforcing bars.

The male and female components are screwed together hand-tight around the upset head without the need to rotate the bar themselves (see Figure 1). The assembly must then be hand-tightened to a snug fit. Lubricate threads with grease or WD 40 and use wrenches if necessary. Full threads must not be visible.


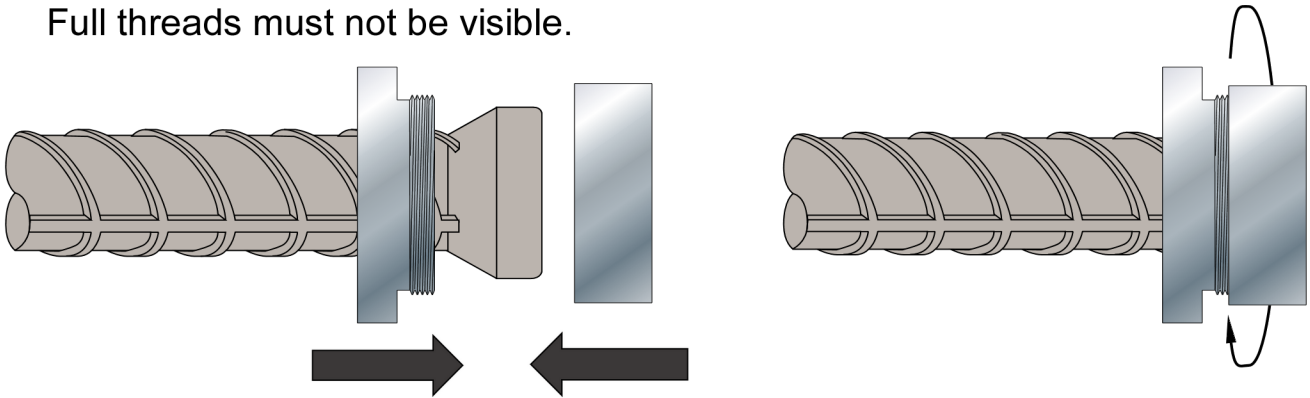


Figure 1 – 551 Series Anchor T-Heads

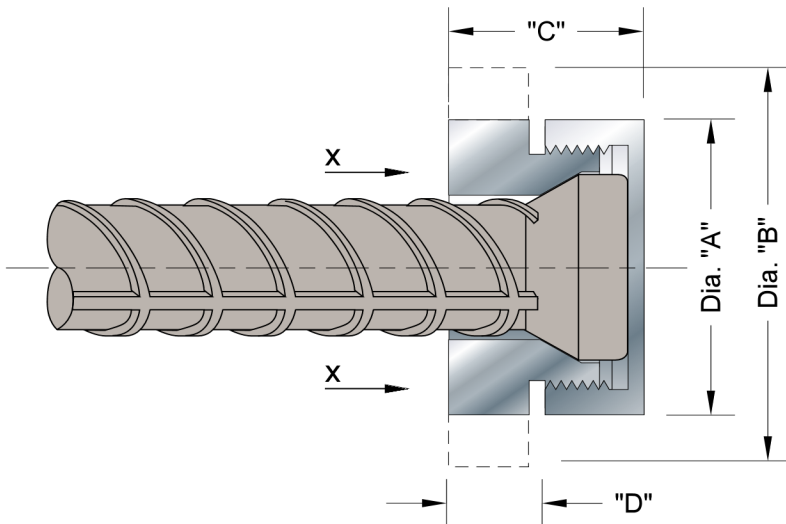

45M (#14) Dimensions	mm
A. HRC 551H (4Ab) O.D.	101.6
B. HRC 551L (9Ab) O.D.	139.7
C. Assembled Thickness (typ)	53.98*
D. Thickness (min)	24.89

* Tolerance +/- 4mm (0.16")

45M (#14) HRC 551H

4Ab Bearing Area Headed 5Ab Bar (A23.3)
 5Ab Anchor Head (S6)

45M (#14) HRC 551L

9Ab Bearing Area Headed 10Ab Bar (A23.3)
 10Ab Anchor Head (S6)

CALIFORNIA PROP. 65 WARNING



CANCER AND REPRODUCTIVE HARM
 WWW.P65WARNINGS.CA.GOV

HRC® 551 Series
45M (#14) Anchor T-Heads



HEADED REINFORCEMENT CORP.
 1-800-HRC-6775

11200 Condor Ave., Fountain Valley, CA. 92708, USA
 Tel: 714-557-1455 FAX: 714-557-4460 email: Sales@hrc-usa.com