


Installation Procedure

SAFETY FIRST! In all cases, follow jobsite safety plans, and consider your own personal safety. Make sure you are wearing PPE, and are securely positioned so that you will not slip or fall during installation.

**Hand-Tighten
To A
Snug Fit**

Form Protector Installation

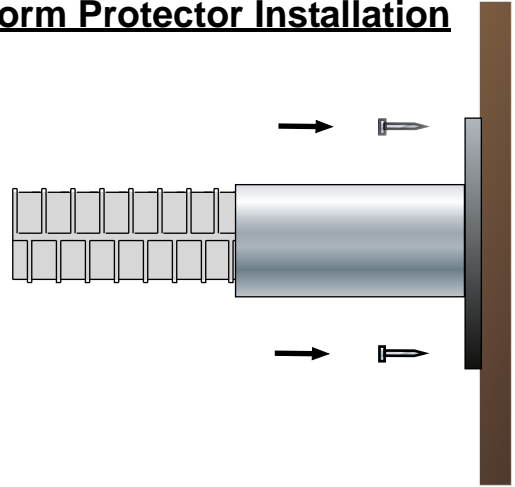

- ① Ensure thread protector is in place prior to mounting to form work.
- ② Position flange plate against form work, and attach with nails or other fasteners.
- ③ Ensure rebar is properly supported to maintain position during concrete placement.

DISCLAIMER


The Optional Flange Plate is non-structural and is not intended to support the weight of the attached rebar and/or field personnel or equipment.

Male Threaded Bar Installation




①

Remove Thread Protector from the HRC 300 Coupler.

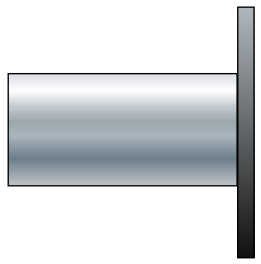


②

Remove any debris in the threaded hole.

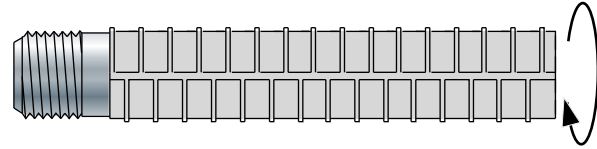


③


Insert the HRC 300 threaded bar into the HRC 300 Coupler. Hand-tighten to a snug fit by rotating clockwise until threads are fully engaged. Lubricate threads and use a wrench if necessary.

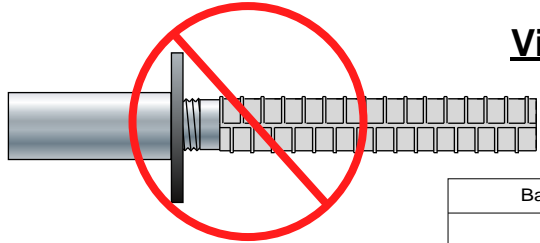

At a minimum, the HRC 300 threaded bar must engage into the coupler a distance equal to "T".



Visual Inspection

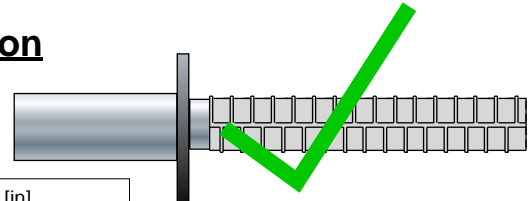

Ensure full threads are not visible.

Bar Size	T [in]
#4	0.75
#5	0.75
#6	1.00
#7	1.00
#8	1.13

CALIFORNIA PROP. 65 WARNING
WARNING
 CANCER AND REPRODUCTIVE HARM
WWW.P65WARNINGS.CA.GOV